

**Warning!**

If a control arm with openings (B), see illustration below, is deformed and replaced, the front axle support must also be replaced!

The bore for the ball joint in the front axle support is deformed/oval.


**Caution!**

Before installing a new control arm, it is essential to derust the stub axle in the area of the contact face of the rubber sleeve.

Align/adjust front axle after assembly.

Remove control arm.


Replace rubber mounts/brackets on both control arms.

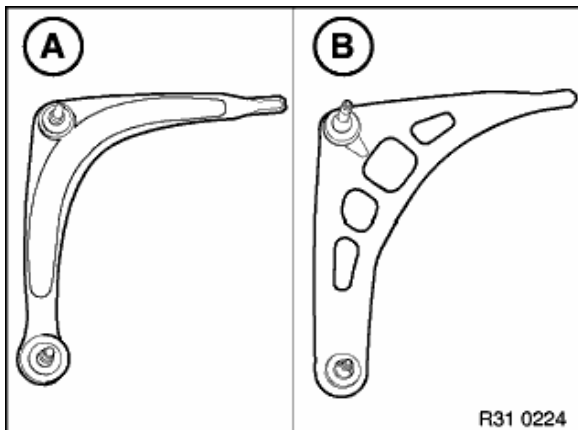**Caution!**

Mixed control arms must not be fitted!

A = Control arm without openings

B = Control arm with openings

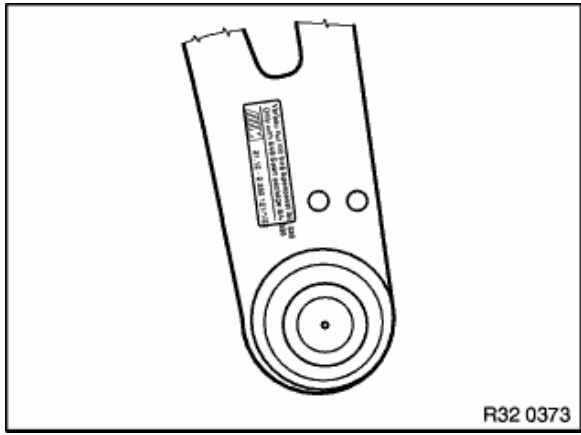

R32 0373

Caution!

Fit control arm with same identification only.